



Digital Video Handbook

Guide to Using Remote Control and On-Screen Menu System



What to Do If Your Video is Not Working.

1. Unplug your Amino Set top box and plug back in.
2. If it is still not working make sure you are on Channel 3 or 4 , or on the appropriate video input channel on the TV set **(not the set top box)**. You can do this by turning the channels up or down at the television itself or from your original remote control.
3. If video still does not work then go to your main connection.(Powerstrip with a lighted switch on it). Unplug for about 5 minutes and replug back in. Wait another couple of minutes and see if your set top box boots up.
4. If this still does not work call us at (419)657-6100. If after hours (up until 11:00 pm), call and press 0 when prompted. Our afterhours service will help or have someone call you shortly.

BTC Video User Instructions

Program Guide
 Used to make on screen choices
 Program Info



Power On/Off
 Device function keys
 View Previous Channel
 Select
 Settings
 VCR/PVR Functions in slide open cover

	The LED (red light) blinks to show that the remote control is working and is sending signals.
	Press AUDIO , VCR , TV , or CBL once to select a home entertainment component to control.
	Press POWER once to turn on or off the selected home entertainment component.
	Use SETUP for all programming sequences.
	Use the keypad (0~9) to directly select channels (e.g., 09 or 31). Press MUTE once to turn sound off or on. Press ENTER once after entering channel numbers on some TV models
	Use VOL+ (or VOL-) to raise (or lower) the sound volume.
	Use CH+ (or CH-) to select the next higher (or lower) channel.
	Press LAST once to recall the last channel and to page back one screen in the main menu.
	Use FAV to cycle through your favorite channels that are stored in your cable converter.
	Use GUIDE to display the program guide. Use EXIT to exit out of your cable converter's menu and guide.



BTC Video User Instructions



FEATURES AND FUNCTIONS

Key Charts (continued)



Use cursor keys to move the cursor in the program guide and menu screens.



Use **SELECT/OK** to choose options, PPV events, and to tune programs from the program guide.



Use **INFO** to display current channel and program information.



Press **SETTINGS** once to display your cable converter's screen menu.



 
Use **PAGE** Δ (or **PAGE** ∇) to page up or down) through menu screens and the program guide.




A-B-C "Cable Converter Features" (see converter manual).



Slide the door open to reveal less-often used keys such as VCR transport buttons and cable converter features.

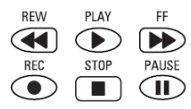

 In the **VCR** and **TV** modes, use the **REW**, **PLAY**, **FF**, **REC**, **STOP**, and **PAUSE** keys to control your VCR. To record a program, press **REC** twice.

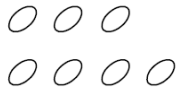

Reserved for cable converter features (see converter manual).



Press **TV/VCR** once to switch the VCR to view TV channels or tape. This key will also control the input select feature on most TVs.

BTC Video User Instructions



SHOW TITLE

Time Show is on

Description

Channel and
Channel Number

Current Time

 
When You Change Channels on the remote the information above is displayed.

BTC Video User Instructions

Using the keys around the select button on the remote, you can scroll up or down in the channel guide.



To select and view a channel, highlight the channel and click SELECT on your remote. This change the channel and display it in the upper left hand corner

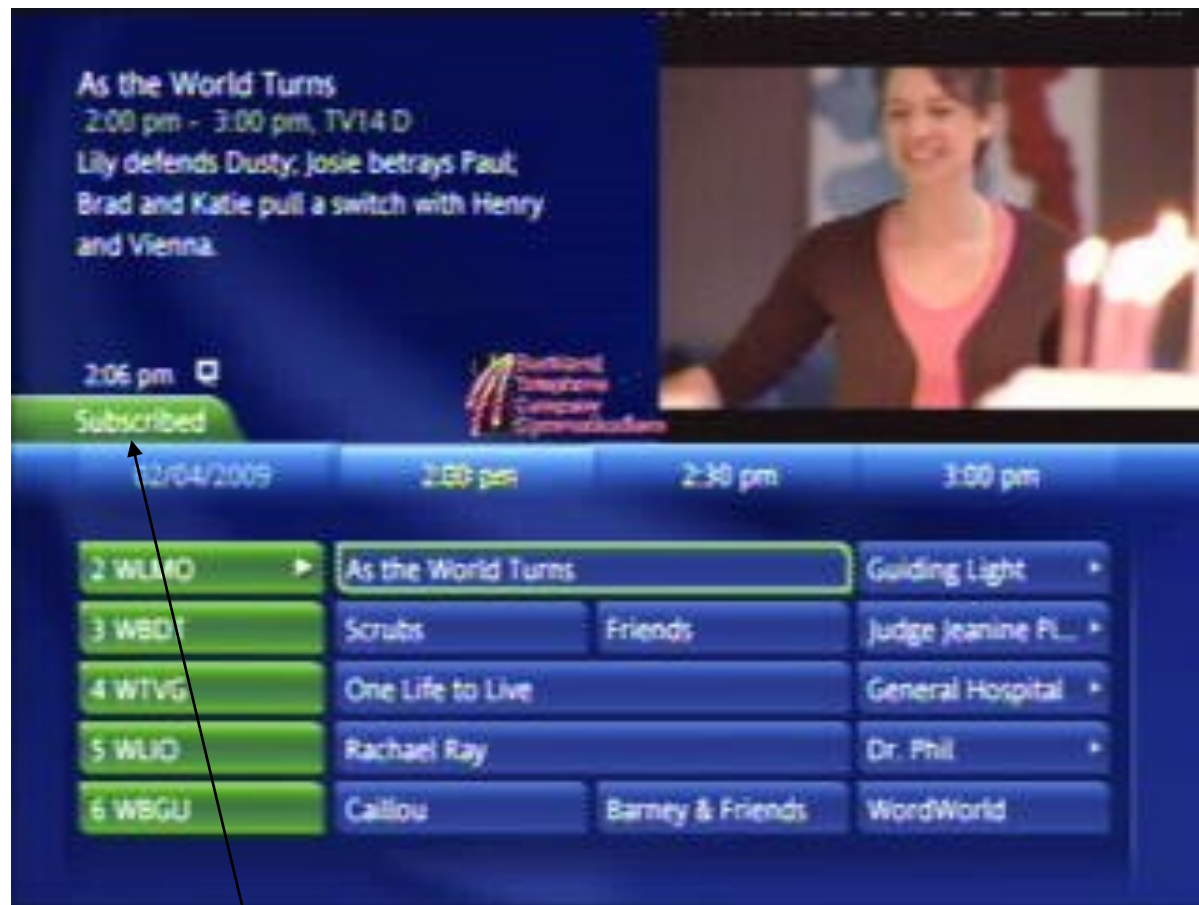


To see the channels that you subscribe to press the GUIDE button a couple of times until it says “Subscribed” in the corner of the on-screen guide. You can also press the GUIDE button to get Favorites or All channels.

(NOTE: whichever mode you are on that is the only channels that you can see or turn to, it is recommended to stay on Subscribed).



Channel Guide

 
1. Push Guide on remote
2. Use arrows to scroll up, down, and sideways.
3. When you find program desired, push SELECT.

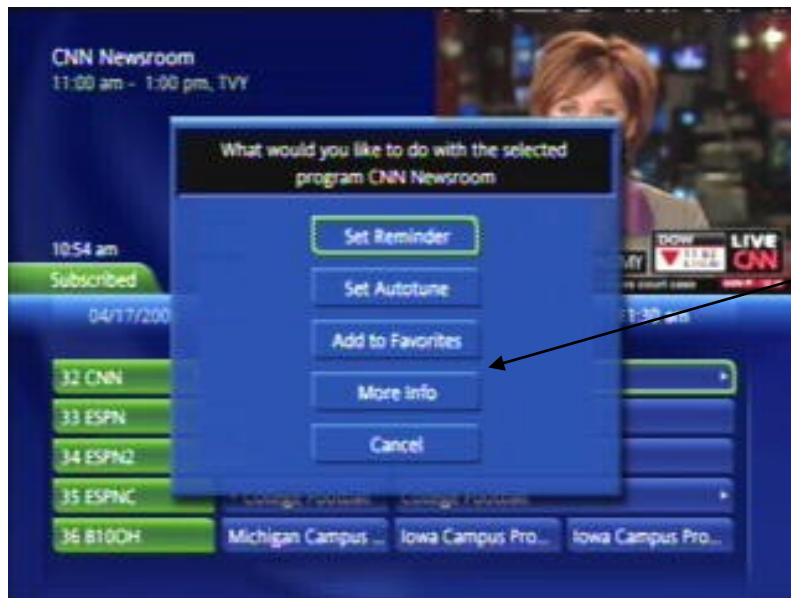

Channel Guide Options

Used for future programming

 1. Push SELECT on remote.
2. Set Reminder— will display reminder when program is on.
3. Set Autotune-will automatically turn to channel at selected time.
4. Add to Favorite-add channel to favorites.
5. More Info-display more information about program.
6. Cancel-cancel current operation.

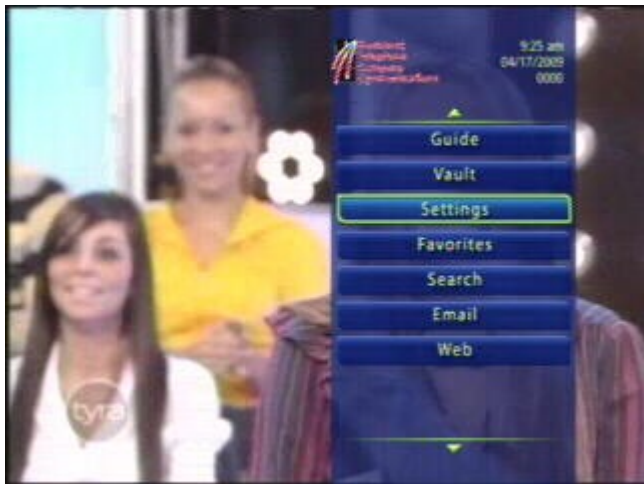

Settings Menu

1. Push Settings on remote
2. Use arrows to scroll up, and down in menu .
3. When you find setting desired, push SELECT.

Settings Menu Options

1. Push Settings on remote.
2. Vault– Not Used Currently.
3. Settings-to change parental controls, video settings, and channel blocking (need password to use).
4. Favorites-Create, Delete, and edit favorite channels.
5. Search– Search function for guide.
6. Email-Not Available.
7. Web– Not Available.